

Freeze button: Works the same way the "Capture" button does on the camera.

Recall: Lets you view the images you've just captured with the camera.

Up/Down: Enables you to scroll through the images via recall button.

Single square/Four square (quad mode)

Delete: Enables you to delete the images you do not want

Neg: Brings up the Negatoscope Mode.

B/W: Turns the screen black & white for x-ray film capturing

VR. Vibration reduction. If the image you captured is kind of "shakey", you can press this button while in recall mode to eliminate it.

Color controls:

Gives you the ability to adjust the image quality and colors

For more Technical Support, visit http://www.RFAmerica.net